

Casa 1

Instructions: Operation of Electronics

As of: 11/3/2016

Library

There are 5 remotes

1. **Pyle remote** controls Master volume to all speakers in the home
2. **Dish remote (make sure it is has number 1 on it)** searches channels of the TV (these are all coming from the satellite dish).
3. **Westinghouse remote** controls the volume that is coming out of the TV speakers
4. **Toshiba remote** it is black and controls the DVD
5. **Roku** it is small and black and controls the programming when watching *Netflix* or any streaming channels

There are several devices/boxes (some behind the wooden doors under the TV)

- **Pyle Receiver** all speakers are connected.
- **Dish** control box (controls Satellite TV).
- **Toshiba** DVD player
- **Westinghouse** DWM40F LCD TV
- **TS6** speaker control box (each button turns speakers around the home on/off).
- **Speaker volume** White knob controls the volume for the front 2 speakers on the front wall by the ceiling

Watching TV in the Library

1. On the Westinghouse remote (has a W on it), *press the red power button*, or walk over and press the power button on the lower right front of the TV. (Television should come on).
2. Make sure the dish box is on. *Press the larger red power button* on the DISH remote (A green light, labeled, “TV 1” should activate on the DISH control box that is behind the wooden doors.) The “TV 1” green light shows that the DISH control box has power.
3. Make sure the TV source (top right orange button on remote) is set to “TVG” channel 3-0 It has to be on this channel to receive the dish signal. If not it will indicate “no signal”
4. Control the volume on sound from the TV using the Volume Control button on the Westinghouse remote.

5. Change channels by *pushing the "GUIDE" button* on the DISH remote. Then use the up or down buttons (above and below the "SELECT" button) to scroll and find the channel you want. *Push "SELECT"* to choose the highlighted channel.

To stream channels with Roku in Library

1. Westinghouse TV has to be on
2. Make sure the TV input or "source" is HDMI 2
3. Use the Roku remote to make selections and the Westinghouse remote to control volume

Note: This is Mexico and a lot of the channels do NOT stream in Mexico (license agreements), Hulu, Pandora, Amazon do NOT work, but "NetFlix" does seem to work . NetFlix is a very popular and has a huge library of premium shows and movies to watch. We have paid for this service for you. Enjoy.

To watch a DVD in Library

1. On the Westinghouse remote, *press the power button*, or walk over and press the power button on the lower right side of the TV. (Television should come on).
2. Make sure the DVD is on. Use remote or the power button is on the right
3. *Change Input on TV to "HDMI 1"*
4. *Press open/close button* on the left and insert DVD

Listening to MP3 player

1. On top of the Pyle receiver amp there is cable and just plug in your player. Make sure the input is MP3. To change the input push the input button just left of the large volume knob

Listening to XM/Sirius Music (or any TV station) throughout the home

1. Basically the same steps as watching TV above except you will play the TV channel throughout the home (see **Additional Tips** for playing Music throughout the home later in this guide)
2. Turn on (as indicated above) and set the volume for the TV off or very low.
3. Turn on the Pyle receiver/amp by selecting the power button on the remote or by pushing the power button on the left side of the receiver.
4. Make sure the receiver/amp "input" is set "DVD/CD" To change the input push the input button just left of the large volume knob
5. All buttons are to be pushed in on the **TS6** speaker control box (each button turns speakers around the home on/off).
6. Control the overall volume using the Pyle remote, or the large volume control

knob on the receiver/amp.

7. **Sound zones** There are 6 numbered buttons on the front of the **TS6 speaker control box**

Zone 1 is the front speakers in the library

Zone 2 is the speakers outside the library by the outside fireplace

Zone 3 is the speakers in the great room

Zone 4 is the speakers in the Master bedroom

Zone 5 is the outside covered patio ceiling speakers

Zone 6 is currently not used

- Please note individual **Volume Control** knobs are on the walls in various rooms/zones. The volume control for the library speakers (zone 1) is located inside the cabinet under the TV. Each knob controls the speaker volume in the immediate area/zone...remember, the speakers only work if the corresponding button on the **TS6** control box in the library is pushed in.

Master Bedroom

There are four remotes

a. Akai remote controls volume and changes the input to the TV

b. Dish remote (make sure it has number 2 on it) searches channels (these are all coming from the satellite dish). To operate make sure the “sat” button (top left of remote) is selected. Select “guide” and scroll through and select your station.

c. Roku remote

d. Sony DVD remote

To watch TV in Master:

1. Both the Akai TV and Sony VCR/DVD has to be “on”. The power button to the Sony VCR/DVD is at the bottom left. The Sony VCR/DVD has to set to “video” and channel 73
2. The input or “Source” on the TV has to be set to “AV”
2. To control the volume use the Akai TV remote
3. To change channels use the dish remote

To stream channels with Roku in Master

1. Akai TV has to be on
2. Make sure the TV input or “source” is HDMI
3. Use the Roku remote to make selections and the Akai remote to control volume

Note: This is Mexico and a lot of the channels do NOT stream in Mexico (license agreements), Hulu, Pandora, Amazon do NOT work, but “NetFlix” does seem to work . NetFlix is a very popular and has a huge library of premium shows and movies to watch.

We have paid for this service for you. Enjoy.

To watch a VCR Tape in Master (yes there are some people still doing this)

1. Open the front lower black cover (flips down.)
2. Make sure “Video” is selected, Insert tape and then hit play

Tips and Troubleshooting

A few tips and understanding the basic components

- If things aren't working correctly, start over, being very careful to follow EVERY step.
- **DO NOT** unplug any wires or change any wiring configuration. (you will be charged if any are changed and we have to rewire)
- Have the DISH remote and the separate remotes available...they are your primary controls for the entire system.
- Make sure the dish satellite box power is on. There is one dish box that supplies signal to *both* TV's. Make sure both of the power lights are on to TV 1 and TV 2. It is located in the library. The actual satellite dish is mounted outside on the roof and it brings the satellite channels into the DISH control box. You should not have to do anything to the Satellite Dish.
- Make sure you have Dish remote 1 for the library and Dish remote 2 is for the Master bedroom
- If you think the batteries are dead, try twisting the batteries so they make a new connection. If you need new batteries contact Ben

Additional Tips for Playing Music throughout the home.

- The music throughout the home comes from the Insignia control box. So it has to be on
- Turn all volume knobs throughout the home to their maximum volume.
- In the library room, using the Volume control on the remote, turn the volume up to the highest volume you will want.
- THEN go around and use the volume knobs around the home to turn the sound down to the level you want in each area.
- Remember there are outside speakers. Don't leave them turned on loud late in the evening.

Troubleshooting

When watching TV the Insignia control box should be off to prevent the TV audio from playing throughout the home

If no picture on the library TV, push the “SOURCE” button (on the front of the TV on the bottom, right side) until it is set to “VIDEO”

Too much volume for the library (zone 1)? Turn down the white speaker control next to the **TS6 speaker control box**. Also make sure the TV volume is turned all the way down.