

Instructions for Operation of Electronics Casa 2

As of: 2/7/2019

Watching TV in the Family room lower level

There are three remotes needed. a. Dish remote controls channels of the TV, volume
c. Sylvania remote operates the DVD player. **d. Sherwood remote** controls Master volume to all speakers in the home

There are three boxes (under the TV) **a. Sherwood Receiver** all speakers are connected. **b. Dish** control box (controls satellite box and TV). **c. Sylvania** DVD player

- 1) Turn on TV. On the Dish remote make sure you are in TV mode, by pressing the TV button at the VERY top right of the remote. Or walk over and press the top power button on the right side of the TV. (Television should come on).
- 2) Make sure the TV input is "HDMI3"
- 3) Turn on the dish box. On the Dish remote pressing the Sat power button at the top left of the remote, or walk over and hit the power button on front of the dish box. A green light, should activate on the DISH control box
- 4) Control the volume using the Volume Control button on the Dish remote, or the side buttons on the right side of the TV.
- 5) Change channels by pushing the "GUIDE" button on the DISH remote. Then use the up or down buttons (above and below the "SELECT" button) to scroll and find the channel you want. Push "SELECT" to choose the highlighted channel.

Watching TV in the upper level Family room

There are two remotes needed. a. Dish remote controls channels of the TV, volume
c. APEX remote operates the TV

- 1) Turn on TV. On the Dish remote make sure you are in TV mode, by pressing the TV button at the VERY top right of the remote. Or walk over and press the top power button on the right side of the TV. (Television should come on).
- 2) Make sure the TV input is "HDMI1"
- 3) Turn on the dish box. On the Dish remote pressing the Sat power button at the top left of the remote, or walk over and hit the power button on front of the Joey dish box. A green light, should activate on the DISH control box
- 4) Control the volume using the Volume Control button on the Dish remote, or the side

buttons on the right side of the TV.

- 5) Change channels by pushing the “GUIDE” button on the DISH remote. Then use the up or down buttons (above and below the “SELECT” button) to scroll and find the channel you want. Push “SELECT” to choose the highlighted channel.

Listening to Music Channels (Sirius/XM channels found on channel 99) inside/outside the home

We subscribe to Dish satellite and you have over 70 Sirius/XM commercial free music stations. Choose from a fabulous variety of contemporary, classic and genre-specific music channels, including Pop, Rock, Country, Hip-Hop, R&B/Urban, Dance/Electronic, Jazz and Classical channels.



1. Basically the same steps as watching TV above except you will play the TV channel throughout the home (detailed in Additional Tips for playing Music throughout the home later in this guide)
2. Turn on (as indicated above) and set the volume for the TV off or very low.
3. Turn on the Sony receiver/amp by selecting the power button on the remote or by pushing the power button on the top left of the receiver. The box should come on. Give it a few moments to set itself and to initiate.
4. Press which set of speakers you want: Speakers “A” are the two inside speakers on the wall above the TV. Speakers “B” are outside. You can select one or both.
6. Control the overall volume using the Sony remote.
7. **Volume Control** knobs are on the walls in the various rooms/zones. The volume control for the inside family room speakers (Speakers “A”) is located on the wall to the left of the TV. The speaker volume for the outside patio speakers are on the upper patio...remember, the speakers only work if the corresponding “A” or “B” button on the control box in the lower family room is pushed.

To watch a DVD Lower level only:

1. On the Sanyo TV make sure input of “ Video” is selected.
2. Insert dvd and then hit play

Troubleshooting - If no picture on the TV, push the “SOURCE” button (on the front of the TV on the bottom, right side) until it is set the lower tv to “HDMI3” the upper needs to be at “HDMI 1” If things aren’t working correctly, start over, be very careful to follow EVERY step. **DO NOT** unplug any wires or change any wiring configuration. Make sure the dish satellite box power is on. The actual satellite dish is mounted outside on the roof and it brings the satellite channels into the DISH control box.